GB SIZE: 148x105mm

DENVER®

MT-774

INSTRUCTION MANUAL

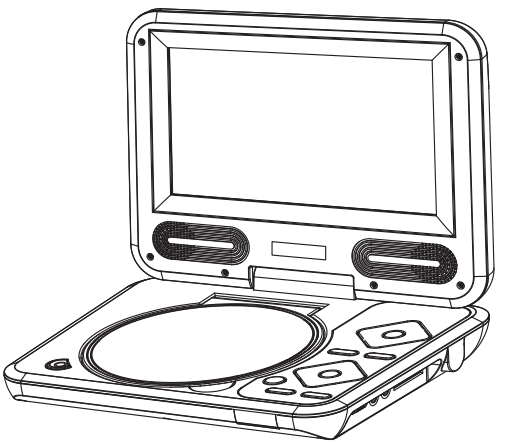

7” PORTABLE DVD PLAYER WITH USB/SD/MMC INPUTS

WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION

Use of controls or adjustments or performance of procedures other thanthose specified herein may result in hazardous radiation exposure.
This Compact Disc player is classified as CLASS 1 LASER product.

CAUTION!

Invisible laser radiation when open and interlocks defeated. Avoid exposure to beam.

FOR SAFE AND EFFICIENT OPERATION

- Do not damage the mains lead.
  When not in use, disconnect the mains lead from the outlet. Grasp the plug, not the mains lead, when disconnecting the unit.
- If water should enter the unit, electrical shock or a malfunction may result. Use in an area where there is low humidity and little dust.
- Do not disassemble or alter the unit in any way.
- Do not use the unit in areas where extremes in temperature occur (below 5°C or exceeding 35°C), or where it may be exposed to direct sunlight.
- Because of the CD player's extremely low noise and wide dynamic range, there is a tendency to turn the volume on the amplifier higher than necessary. Doing so may produce an

excessively high output from the amplifier which can cause damage to your speakers. Please be careful in this regard.

- Sudden changes in the surrounding temperature can cause dew to form on the optical pickup lens inside the unit. Under this condition the unit may be unable to operate properly. If this should occur, remove the disc and allow the player to adjust to the surrounding temperature.
- This unit must be operated in a horizontal position.
- Please use the original DVD or VCD or CD or MP3 software, and any copy discs are not recommendable for use.
- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc;
- No naked flame sources, such as lighted candles, should be placed on the apparatus;
- It shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus;
- Do not place the product in closed bookcases or racks without proper ventilation.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Excessive sound pressure from earphones and headphones can cause hearing loss.

To prevent fire or shock hazard, do not expose this appliance to dripping or splashing. No objects filled with liquids, such as vases, shall be placed on the apparatus.

THIS UNIT SHOULD NOT BE ADJUSTED OR REPAIRED BY ANYONE EXCEPT PROPERLY QUALIFIED SERVICE PERSONNEL.

POWER SUPPLY

There are two ways to supply power: AC power supply and Lithium battery power supply.

AC power operation
Connect one end of the mains lead to the DC ~IN socket and the other end to an AC outlet, and set the POWER ON/POWER OFF select switch to POWER ON.

Lithium battery power supply
When the lithium battery be full charged, push the POWER ON/POWER OFF select switch to POWER ON, the unit will start work.
Once you connect the unit to the AC outlet, the lithium battery will be charged. The indicator light has been flashing during charge period. when charged be full of, the indicator light hasn't been flashing.

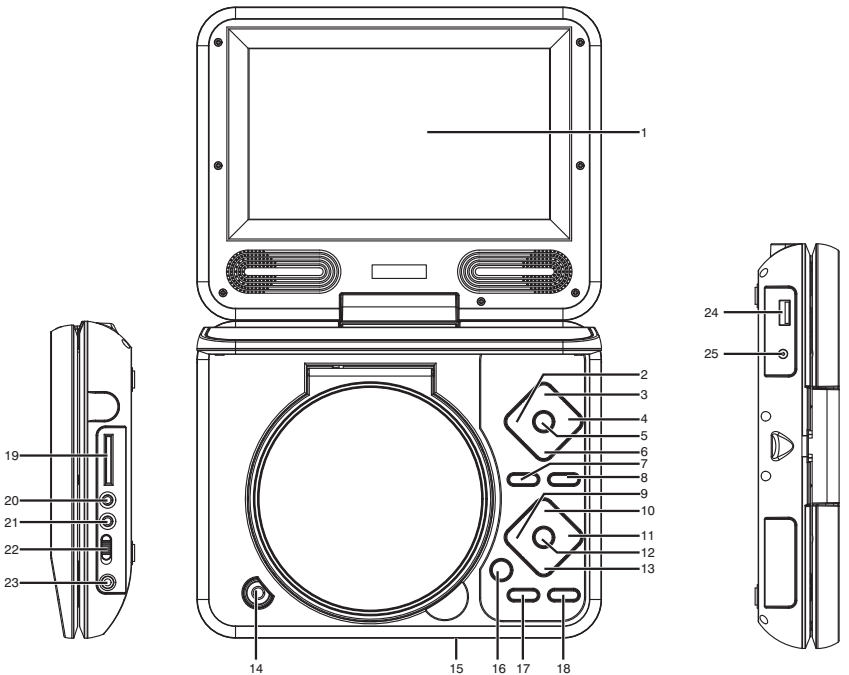
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25

THE FUNCTION PARTS OF THE UNIT

1. TFT screen
2. Left button
In the menu interface , press the key to move left the option, then press"OK" key to enter the current location.
3. Upward/ Previous song button:
In the menu interface , press the key to move up the option, then press"OK" key to enter the current location.
In the CD/VCD/DVD play interface, press the key to enter previous song
4. Right button
In the menu interface, press the key to move left the option, then press"OK" key to enter the current location.
5. OK button
6. Downward/ Next button
In the menu interface , press the key to move down the option, then press"OK" key to enter the current location.
In the CD/VCD/DVD play interface, press the key to enter next song.
7. Setup button: Enter DVD setup menu.
8. Menu button:
In CD/VCD play mode ,open or close PBC.
In DVD play mode, enter song play menu.
9. Volume- button
10. USB/SD card button
11. Volume+ button
12. Repeat button
13. Audio button
14. CD/VCD/DVD Compartment Lid open button
15. indicator light:
In work state, indicator lights up, in standby state, indicator light display flashes red.
16. Mode button:
Enter display setup menu to set Brightness, Contrast, Colar, FLIP, MODE, Reset.
17. Stop button
18. Pause/play button
19. SD/MMC card socket
20. AV OUT socket
21. COAXIAL socket
22. POWER ON/POWER OFF select switch
23. Phone socket
24. USB socket
25. DC～IN socket

REMOTE CONTROL

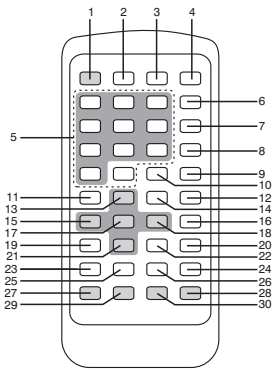

1. STANDBY button
2. USB/CARD button
3. DISPLAY button
4. MUTE button
5. Number button
6. REPEAT button
7. A-B button
8. GOTO button
9. STOP button
10. TITLE button
11. SETUP button
12. VOL+ button
13. Upward button
14. ZOOM button
15. LEFT button
16. VOL- button
17. OK button
18. RIGHT button
19. AUDIO button
20. PLAY/PAUSE button
21. Downward button
22. SUBTITLE button
23. Fast Recede button
24. Next song button
25. Fast forward button
26. Previous song Button
27. LCD-MODE button
28. MENU/PBC button
29. N/P button
30. PROG button

CAUTION

1. When using the remote controller ,make sure the remote controller directly to the remote sink of the unit ,and avoid operating in the 45°C and 5m range having no any bar.
2. When the remote controller doesn't use ,change the battery as right picture.
3. If the battery isn't used for a long time ,take out it .

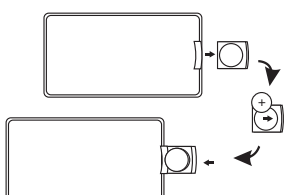

INSTRUCTION TO KEYSTROKES OF REMOTE CONTROLLER

1. Standby button: switch on/off the unit.
2. USB/CARD button: when insetr USB or CARD, press this button to play song in the USB or CARD.
3. Display button: display the information of current song.
4. Mute: mute control
5. Repeat button:
Each press the REPEAT button will change the repeat mode. During MP4/VCD/CD playback, there are three modes: Repeat single ,Repeat all and off. During DVD playback, there are four modes: Repeat chapter, Repeat Title, Repeat all and off.
Note: During VCD playback, the PCB mode must be set to off.
6. A-B button:
Repeat play between A-B point for all discs.
1) Press "A-B" button once at the point where repeat play is started. (“Rep A-” appears on the TFT screen.)
2) Press "A-B" button again at the point where repeat play is stopped. ("Rep A-B" appears on the TFT screen)
3) To cancel, press "A-B" button again.
7. GOTO button:
Press this button enter into search interface, such as:

Search	
Title	16
Chapter	1
Time	00:00:03

Press upward/downward button to move high light bar to select item you desired, then press left or right button to set the value, or press number buttons to set the value.
8. Title button: press this button to display disc's played title.
9. Stop button: stop play.
10. Setup button: enter into the DVD setup interface.
11. Upward/Downward button: press the key to move up/down the option, then press" OK " button to enter the current location.
12. Left/Right button: press the key to move left/right the option, then press "OK" button to enter the current location.

13. OK button: press to enter an item in the menu or to confirm and execute a selection.
14. Zoom button: repeat this button in turn to Q1,Q2,Q3, Q4, off.
15. Vol-/+: turn down/up the volume.
16. Audio button: enter into Audio setup menu, repeat press this button to select left, right and stereo audio.
17. Subtitle button: The button's function is switch subject title in DVD disc play mode. (One DVD disc has over 32 kind of language).
18. Play/Pause button: Switch between Play and Pause.
19. ◂◂ Fast backward search button
20. ▸▸ Fast forward search button
21. ⏮ Pre-view SKIP button
22. ⏭ Next-view SKIP button
23. LCD-MODE button: Enter display setup menu to set Brightness,Cintrast,Color,Flip, Mode,Reset.
24. N/P button: switch between PAL mode and NTSC mode.
25. PROG button: press PROG button, enter desired track in sequence by setting the program play.
Press this button enter into program play interface, such as:
When playing DVD:

Program		
1	....	Play
2	....	
3	....	Clear program

When playing VCD:

Program		
1	.....	Play
2	.....	
3	.....	Clear program

Press upward/downward/left/right button to move high light to design point, then press number button to set title and chapter which you desired. Move the high light to “play” after finishing the setup of the program play, then press OK button, the unit will play the DVD DISC in sequence according to the program sequence you just do. If you want to cancel the program play, move the high light to “Clear program”, then press OK button.

Tip: When play DVD disc, you must input title and chapter, and when play VCD, you just only input chaper.

26. Menu:
In CD/VCD play mode ,open or close PBC.
In DVD play mode, enter song play menu.

GENERAL OPERATION

1. Connect one end of the mains lead to the DC ~IN socket and the other end to an AC outlet, the indicator light will display red.
2. Press the CD/VCD/DVD Compartment Lid open button to open the Compartment Lid, put the DISC in.
3. Set the POWER ON/POWER OFF select switch to POWER ON, the indicator light will display green, and the unit will automatically play the DISC.
4. Press the Play/Pause button to pause the play, press twice to resume play.
5. Press Stop button to stop the play.
6. Press power button to switch off the unit, the indicator light will display red.

DVD PLAYING OPERATION

1. Open the unit, after inserting the disc , close the cover , then the unit will play automatically.
(Press some invalid button, the screen will show "not allowed at the moment".)
2. Title/Chapter Search
(1) Some discs will have many title, each title will have many chapters. Press Title button on the remote controller in playing, the screen will show title.
(2) Press upward/downward/left/right button to select expected title, then press “OK” button to play.
(3) Select playing tracks chapter with number key "0-9" and "10+" (the entering number must less than the total chapter number), then press "ENTER" to play.
3. Previous and next
During playing, press "⏮" "⏭" button of the remote controller, each time press the button, jump a chapter to playing.
Press "⏮", playing from the next chapter;
press "⏭", playing from the previous chapter.
4. Fast forward and fast backward
(1)Press the "⏩" button or "⏪" button to activate fast forward or fast backward function.

(2)Each time you touch the " ⏩ ", the fast forward speed goes from forward X2, forward X4,forward X8, for ward X16 to normal playback.

(3)Each time you touch the " ⏪ ", the fast backward speed goes from backward X2, backward X4, backward X8,backward X16 to normal playback.

5. Pausing disc play

(1)Press the " ⏯ " button to make the disc pause.

(2)Press the " ⏯ " button again to start playing again.

6. Stopping playback

(1)Press the " ■ " button once, stop playing, press the button again to stop al l play backs without last memory.

(2)Press the " ⏯ " button to resume from where it is stopped or start play.

7. Change the subtitle

This function only available when there are two or more subtitle languages recorded in the disc.

Press "SUBTITLE" button on the remote controller while playing to change between available subtitle languages. Repeatly press the button, the subtitle language change among English, German, Danish, Auto, Off.

Some discs record most 32 languages. Please see most subtitle marks on the disc, the number show how many languages had recorded.

8. Switching the Audio Languages

This function only available when there are two or more audio languages recorded in the disc.

Press "AUDIO" button on the remote controller, each time press it, you can switch between available languages.

Some of disc can record 8 audios. Detailed condition, please see language mark on the disc. The number had showed the recorded language.

The function may not work with some disc or during some courses. It may require some time to switch between audio language.

9. Repeat function

Press the “REPEAT” button on the remote controller to repeat playing.

Press the first time, showing current repeat mode, select repeat mode according to pressing times, repeat mode is circle as below: repeat All ⟶ repeat chapter ⟶ repeat title.

10.Repeat segment

Press "A-B" button on the remote controller to select expected playing segment, the default is off.

Press once, the repeat begin from A

Press twice, the repeat end from B

Press third, close the repeat function.

11.Screen display playing status

When playing and then press "DISPLAY" button on the remote controller, the screen will display the playing status: title playing time, title remainder time, chapter playing time, chapter remainder time.

SETUP THE DVD MENU FUNCTION

Press “SETUP” button on the remote controller or the unit, the screen will show setup menu. Press direction key (upward/ downward/lef/right button) to move the high light and set the items, press OK button to confirm. Press the “SETUP” button for the second time, the unit will exit setup interface.

1. Language setting

(1)Language
- English
- Deutsch
- Swedish
- Dansk

(2)Subtitle
- English
- German
- Swedish
- Danish
- Auto
- Off

(3) Mpeg4 subtitle
- Ascll
- Unicode
- Turkish
- Central European
- Cyrillic
- Chinese

(4) Audio
- English
- German
- Swedish
- Danish

(5) DVD menu
English
German
Swedish
Danish

2. Video setting
(1) Aspect Ratio
4:3 LB
4:3 PS
16:9

(2) TV System
NTSC
PAL
Auto

3. Audio setting
Digital Output
Off
PCM
All

4、Rating Setting
The parental control feature allows parents to prevent their children from watching inappropriate material on a DVD. The player will deny access to the DVD contents if the DVD's rating is over PG-13. To unlock the parental control function ,you will have to enter the 4-digit security password (the default code is 8888), and press the ENTER button.

5. Misc Setting
(1) Use Default Setting
Move the high light to the “Use Default Settings”, then press OK button, it will show “Do you want to use default setting?” you can select yes or no.

(2) Screen saver
Off
On

(3) Enable
Off
On

VCD PLAYING OPERATION

After selecting the disc, the playing mode auto form. The function whether or not work according to some the story of the disc. If the VCD disc with PBC function, it will start playing after the menu screen displaying.

1. Title/Chapter playing (The disc must have PBC function and the PBC is on)

When playing, press " Menu " button , the screen will show title. Press number key "0-9" and "10+" to select expected chapter (the entering number must less than the total chapter number).

2. Previous and next

During playing, press "⏮" "⏭" button of the remote controller, each time press the button, jump a chapter to playing.

Press "⏮", playing from the next chapter; press "⏭", playing from the previous chapter.

3. Fast forward and fast backward

(1)Press the "⏩" button or "⏪" button to activate fast forward or fast backward function.

(2)Each time you touch the "⏩", the fast forward speed goes from forward X2, forward X4, forward X8, for ward X16 to normal playback.

(3)Each time you touch the "⏪", the fast backward speed goes from backward X2, backward X4, backward X8,backward X16 to normal playback.

4. Pausing disc play

(1)Press the "⏯" button to make the disc pause.

(2)Press the "⏯" button again to start playing again.

5. Stopping playback

(1)Press the " ■ " button once, stop playing, press the button again to stop al l play backs without last memory.

(2)Press the " ⏯ " button to resume from where it is stopped or start play.

6. Repeat function

Press the “REPEAT” button on the remote controller to repeat playing.

Press the first time, showing current repeat mode, select repeat mode according to pressing times, repeat mode is circle as below: repeat single→repeat all→repeat off.

7. Repeat segment

Press "A-B" button on the remote controller to select expected playing segment,

the default is off.
Press once, the repeat begin from A
Press twice, the repeat end from B
Press third, close the repeat function.
8. Screen display playing status
When playing and then press "DISPLAY" button on the remote controller, the screen will display the playing status: Track, chapter playing time, chapter remainder time.
9. Change the audio output
Press the “AUDIO” button when playing, each time you press, the sound modes will change in sequence. Switch among: Left, Right, Mix, Stereo.

JPEG PLAYING OPERATION

JPEG disc is formed by many lists, each list has many JPEG pictures.
After selecting disc and play it, the unit will auto play JPEC disc.
Press "Upward " or "Downward" or “Left” or “Right” button on the remote controller to select different picture.
Press " OK " button to play selected picture.
Press "left" button to return menu.

MP3 PLAYING OPERATION

1. MP3 is formed by many lists (folders), each list has many MP3 tracks.
After selecting disc and play it, the unit will auto play MP3 mode.
Press " upward" or "downward" button to select page.
Press "upward", "downward", " left " and " right " button to select track.
Press " OK" to playing selected track.
Press "left" button to return folder.

2. Fast forward and fast backward
(1)Press the "⏩" button or "⏪ " button to activate fast forward or fast backward function.
(2)Each time you touch the " ⏩", the fast forward speed goes from forward X2, forward X4,forward X8, for ward X16 to normal playback.
(3)Each time you touch the "⏪", the fast backward speed goes from backward X2,

backward X4, backward X8,backward X16 to normal playback.

3. Pausing disc play

(1)Press the "⏯" button to make the disc pause.

(2)Press the "⏯" button again to start playing again.

4. Stopping playback

(1)Press the " ■ " button once, stop playing, press the button again to stop al l play backs without last memory.

(2)Press the "⏯" button to resume from where it is stopped or start play.

5. Repeat function

When playing, press “repeat” to select repeat function. Press once to select a track repeat; Press twice to select folder or dir repeat; Press third to select repeat all disc; Press four close.

Repeat mode: repeat " OFF "→repeat " ONE " → repeat " DIR " → repeat " ALL ".

6. Repeat segment

Press "A-B" button on the remote controller to select expected playing segment, the default is off.

Press once, the repeat begin from A

Press twice, the repeat end from B

Press third, close the repeat function.

7. Screen display playing status

When playing or stop, press " display " button on the remote controller to show current track playing time or remainder time.

CD PLAYING OPERATION

After selecting the disc and play it, the unit will auto play CD (If press the button on the unit or the remote controller without function, the screen will show "not allowed at the moment".

1. Select number to play at first hand.

Press number button " 0~9 " and " 10+ " on the remote controller to select song according to track number (if the track number over the disc range, the input is invalid).

Eg: If you select twelfth track, press " 10+ " first and then press " 2 " to select it.

2. Previous and next

During playing, press "⏮" "⏭" button of the remote controller, each time press the button,

jump a chapter to playing.
Press "⏮", playing from the next chapter; press "⏭", playing from the previous chapter.
3. Fast forward and fast backward
(1)Press the "⏩" button or "⏪" button to activate fast forward or fast backward function.
(2)Each time you touch the "⏩", the fast forward speed goes from forward X2, forward X4, forward X8, for ward X16 to normal playback.
(3)Each time you touch the "⏪", the fast backward speed goes from backward X2, backward X4, backward X8,backward X16 to normal playback.
4. Pausing disc play
(1)Press the "⏯" button to make the disc pause.
(2)Press the "⏯" button again to start playing again.
5. Stopping playback
(1)Press the "■" button once, stop playing, press the button again to stop al l play backs without last memory.
(2)Press the "⏯" button to resume from where it is stopped or start play.

6. Repeat playing
When playing, press “REPEAT” button to select repeat playing function.
Press once, repeat playing the current track.
Press twice, repeat playing the current disc.
Press third times, close repeat playing function.
Repeat mode: repeat " OFF " → repeat " ONE " → repeat " ALL ".
7. Repeat segment
Press "A-B" button on the remote controller to select expected playing segment, the default is off.
Press once, the repeat begin from A
Press twice, the repeat end from B
Press third, close the repeat function.
8. Screen display playing
When playing, press "display " to show round current track playing time, current track remainder time, all disc playing time and all disc remainder time.

USB/SD CARD PALY

Insert the USB or SD card to the USB socket or SD/MMC socket, press “USB/CARD” button on the remote controller, the unit will read the information on the USB or SD card. The next steps as operation DVD

SPECIFICATIONS

Compatibility:
DISC DVD/VCD/MP3
Mode: PAL/NTSC
Screen size: 7 inch
Power: 0.8Wx2
DC power supply: 12V, 1.5A
Work temperature: 5°C～35°C
Lithium Battery: 7.4V/1750mAh
Dimensions : 210x 164 x 41 mm
(W) x (H) x (D)
weight (approx) : 822.5g (excluding batteries)

Accessory: instruction book,
remote controller, AV cord, power adaptor,
power supply by car plug, assurance card.

- Specifications subject to change without notice.

Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen below. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the approriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

DENVER®

All rights reserved
Copyright Denver Electronics

CE

www.denver-electronics.com